

QUICK START GUIDE

THANK YOU FOR PURCHASING YOUR NEW EUREKA VACUUM!

Please take a few moments to read this Quick Start Guide. It is designed to help you assemble your vacuum easily.

If you have questions about your new vacuum, please contact our customer service helpline at 1-800-282-2886. We're here to help!

Helpline Hours: 8 a.m. to 7:30 p.m. (CST), Monday - Friday 10 a.m. to 6:30 p.m. (CST), Saturday - Sunday





What's in the carton


No screws or tools required!



Vacuum cleaner

OWNER'S GUIDE

Important safeguards

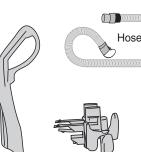

Handle Carry handle

 


Extra belt Turbo holder


PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

Moving parts! Assemble the vacuum cleaner before using.


Dusting



ower hose retainer

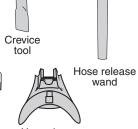

retainer

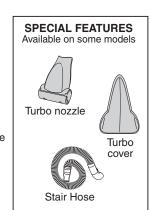



Follow 1-11

in order


to ensure

proper assembly.


Easy assembly




Remove bag compartment to assemble vacuum.

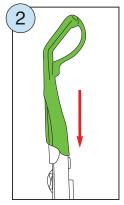


Place handle on vacuum; push down to snap in place.

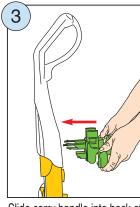


Slide carry handle into back of handle. Snap into place.

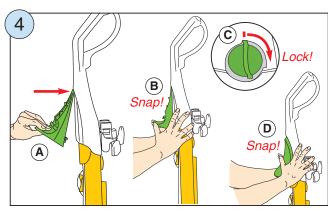


Insert top tab A turbo holder into handle. Place thumbs on each side and snap bottom corners B into place. Turn C knob to lock. Store turbo nozzle in holder. Some models: Snap D turbo cover straight on from front to back.

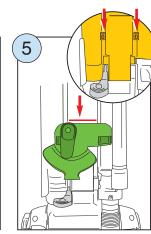

Place lower hose retainer in slots on back of vacuum. Push down past rib.

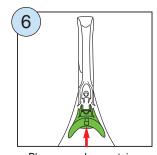


Place upper hose retainer on back of handle. Push **up** to snap into place.

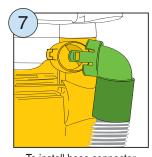


To install hose connector, align tab at right and snap on at left.




Pull out bottom of lower hose retainer and position hose.

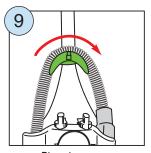

Place hose over upper hose retainer.

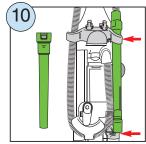

Push wand onto end of hose. Place over bottom hook; snap in at top.

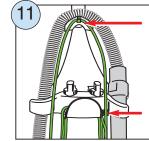

Push cord into carry handle and upper cord retainer. Wrap cord. Place dust cup back on vacuum. Push back to latch.



Get ready to vacuum


Power switch is marked (1) for on-off.



To vacuum floors, turn air path knob to 'floors."




Adjust height for carpet or bare floors.

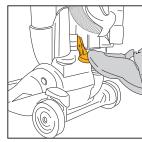

Step on power switch to turn on; step on again to turn off.



Step on handle release to lower handle into position.

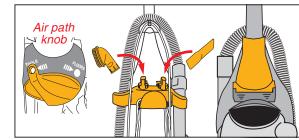


Attach tool to end of wand. Turn air path knob to 'tools.' Store tools on carry handle and turbo nozzle in holder.



Replace disposable dust bag

Replace bag when indicator turns orange.

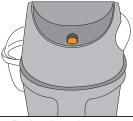


Replace bag when green indicator turns orange.




Pull up latch to open cover.



Fold over hygienic flap ① and tuck in.

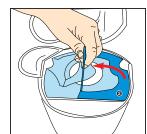

Lift handle 2 and remove disposable dust bag.

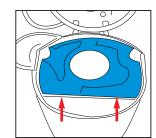

Line up flat edge to install new bag.



Close cover and snap to lock in place.