

QUICK START GUIDE Thank you for purchasing your new Eureka vacuum! Before

HELPLINE


1-800-282-2886

 
8 a.m. to 7:30 p.m. (CST), Monday - Friday 10 a.m. to 6:30 p.m. (CST), Saturday - Sunday

www.eureka.com




Vhat's in the carton

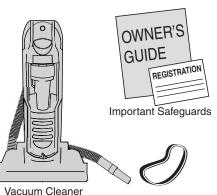





Handle

 


SPECIAL FEATURES Available on some models Turbo Nozzle Clip **Bare Floor Nozzle** and Wand Turbo Nozzle Stair Hose



asy assembly




READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER. Moving parts! Make sure power switch is in OFF (O) position before plugging in power cord. Assemble the vacuum cleaner before using.

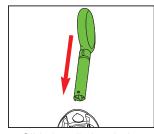


Extra Belt

Slide handle into hole.

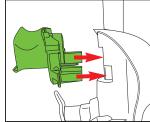


Slide on carry handle.

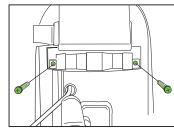


Tighten two screws to secure carry handle.




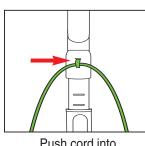


Push cord into cord retainer.

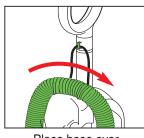


Place hose over carry handle.

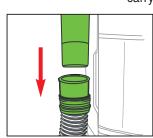


Connect hose into lower base hose.

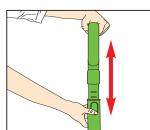


Push handle button down to adjust handle height.

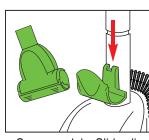


Some models: Slide clip onto front of handle and store turbo nozzle.

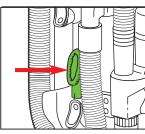

Place dusting brush on its holder.

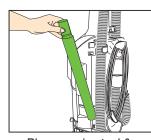


Place crevice tool & wand in front of hose.

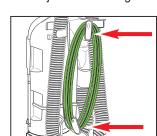


Wrap cord.



Get ready to vacuum

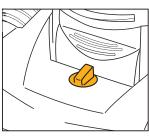


Adjust height for carpet or bare floor.

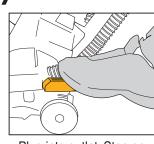


Plug into outlet. Step on handle release to lower handle into position.



Push power switch (I) on.

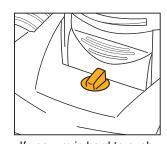


If vacuum is hard to push, raise carpet setting.

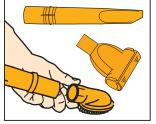


For accessories, loosen end of hose; pull out and

attach tool.

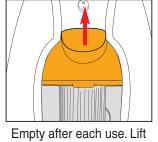

latch to remove dust cup.



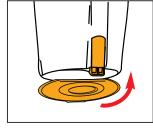

Close bottom lid until it clicks.