

eureka

Owner's Guide

eureka

SINCE 1909

Thank you for purchasing your new Eureka machine! Please read this Owner's Guide carefully before operating, and keep it properly.




PLEASE RECYCLE.
OPEN OTHER END. DISPLAY THIS END DOWN.
FOR HOUSEHOLD USE ONLY.



V18C01A-80

PRODUCT INTRODUCTION

PRODUCT OVERVIEW

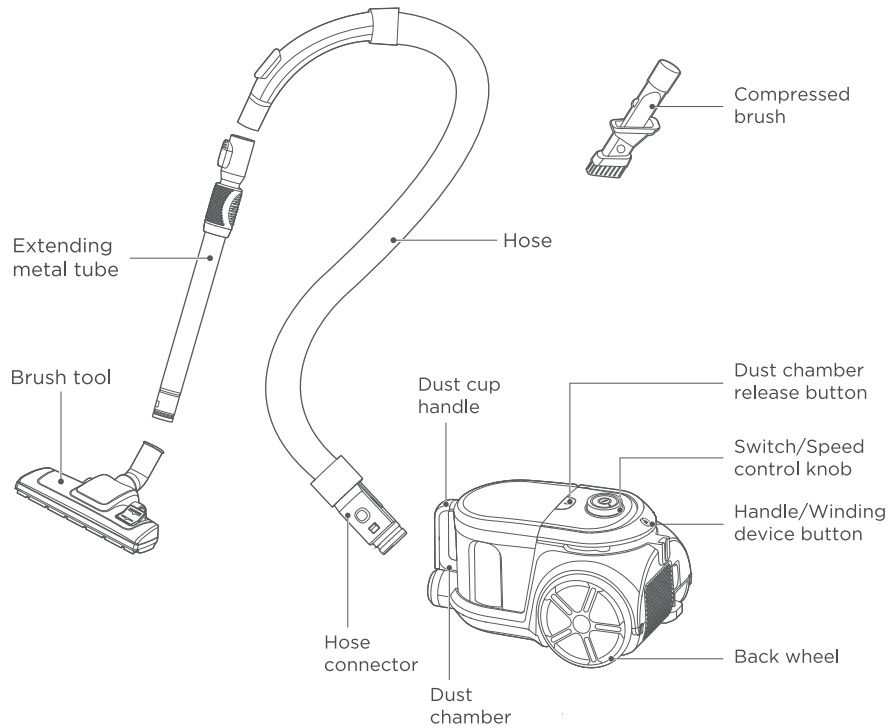

SAFETY DIRECTION


1. For the first operation, it is advisable to read the manual carefully before hand and keep it properly for future use.
2. Before the first operation, make sure the dust cup is properly installed.
3. Make sure the power supply is 220-240V 50Hz.
4. Do not vacuum water and inflammable material.
5. Do not vacuum burning material and ashes.
6. Do not use the machine without a motor protection filter filled.
7. Please change the dust cup/filter immediately when it is damaged.
8. Do not store or use the machine close to high temperature places.
9. Do not let children use the machine in case of any danger.
10. If abnormal noise, smell, smoke or any other failure or breakage was found during the operation, you should turn off the switch and unplug it. Then contact with your service center for repair. Do not repair it by yourself.
11. If the supply cord is damaged, it must be replaced by the manufactures or its service agent or a similarly qualified person in order to avoid a hazard.

OPERATION GUIDE

ASSEMBLY BEFORE USE


Shows the connection of the hose and the vacuum cleaner:

Put the hose connector in front of the vacuum cleaner. Then insert it into the inlet hole and turn right. If you want to disassemble it, you can turn the hose connection left and then pull it out.

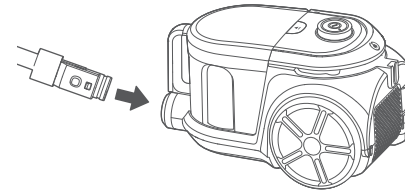


Shows the connection of the hose and the extending metal tube:

Hold the flexural connector of the hose and put it into the bigger hole of the tube.

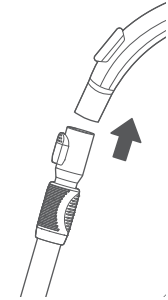


Shows the connection of the tube and the brush tool:

Put the metal tube into the hole of the brush and rotate it to fasten them.

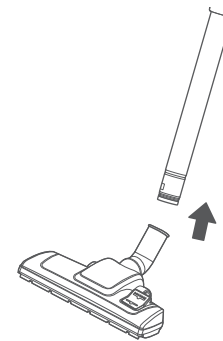



Shows how to check the winding of the power cord:

You can pull the power cord out of the machine and stop it when you see the yellow mark. Make sure the red mark is not out. When your sweep is over, first turn off the power, pull the plug out of the socket, and then push the winding device button until the cord is completely in the machine.

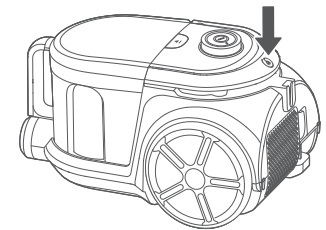

Shows the power button:

Put the plug into the socket, push the power button to control the work of the machine.

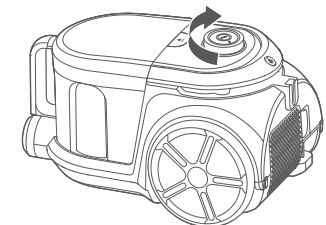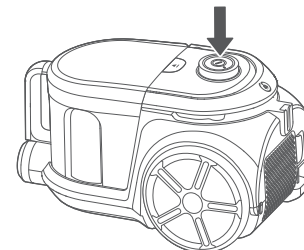



OPERATION GUIDE

CLEANING OF THE DUST CHAMBER


The steps of the chamber cleaning:

1. Hold the dust chamber and handle and push the release button.

2. Take the dust chamber out of the machine.

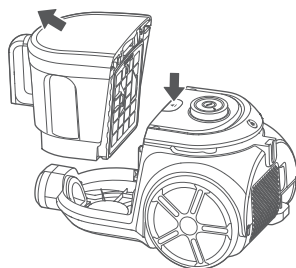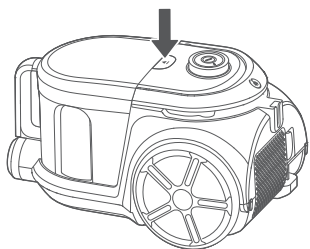


3. Put the dust chamber onto the rubbish bin, push the release button to open the top the dust chamber, and the dirt and dust will fall into the bin by themselves.

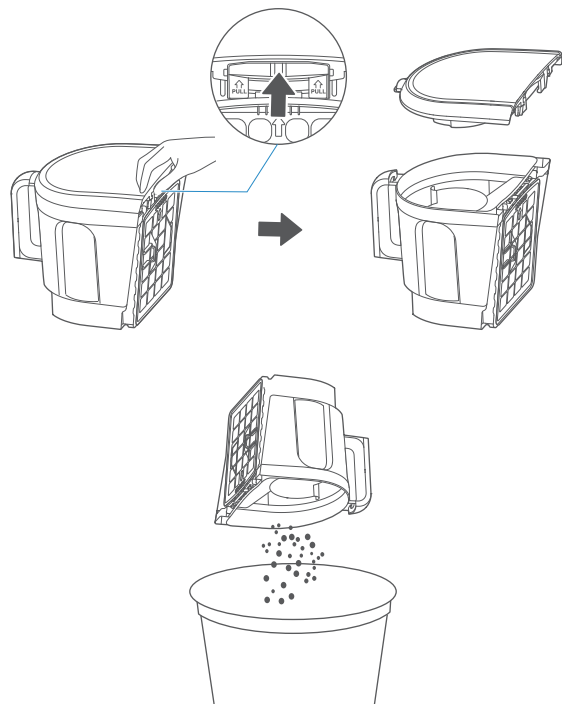


OPERATION GUIDE

HOW TO USE THE ATTACHMENTS

1. Tread on the pedal of the brush tool to let the bristles out, and you can clean the floor.

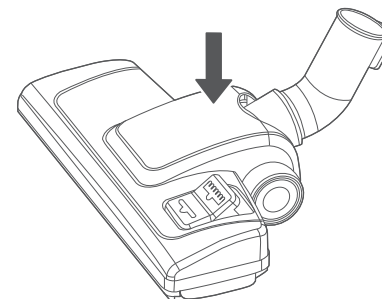

2. Tread on the pedal of the brush tool again to put the bristles in, and you can clean the carpet.

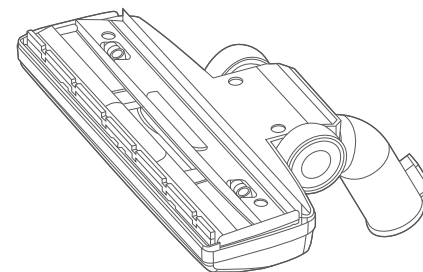


OPERATION GUIDE


HOW TO MAINTAIN

1. The filter should be cleaned twice a year, or when there is obvious dirt on the filter.
2. You must fix the filter properly before running the vacuum cleaner.
3. The filter can't be cleaned in the washing machine or baked by the blower.
4. It will reduce the suction power and damage the motor if you use the wet filter.
5. Steps for maintenance:


Press the outlet lock to open the outlet board.

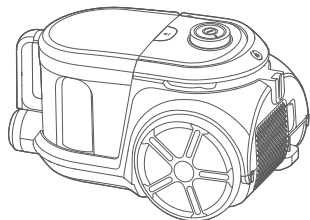


Get out the outlet filter.

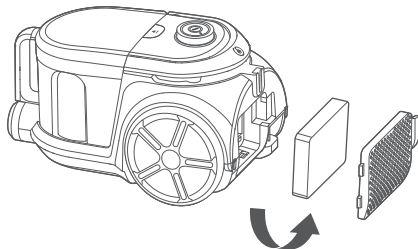


Pull the chamber cover to separate it from the dust bin.

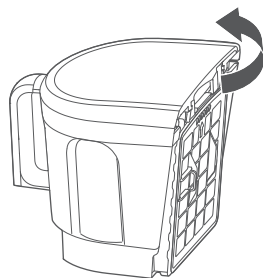

If you have any hair winding removable cleaning.

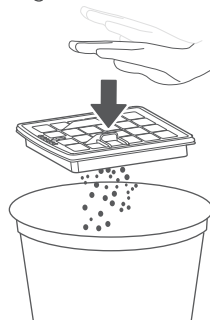

Get the filter and wash it.

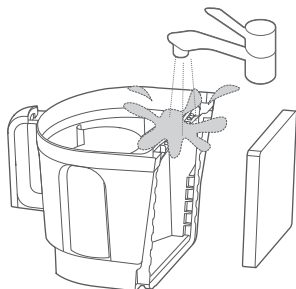

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.