AS5200 Series

QUICK START GUIDE

Thank you for purchasing your new Eureka vacuum!

Important instructions

For easy assembly, please take a few moments to read this Quick Start Guide.

If you have questions about your new vacuum, please contact our customer service helpline at 1-800-282-2886. We're here to help!

www.eureka.com

Helpline hours:
8 a.m. to 7:30 p.m. (CST), Monday - Friday
10 a.m. to 6:30 p.m. (CST), Saturday - Sunday

eureka!®
Invented for the way you clean™

STEP 1 What's in the carton

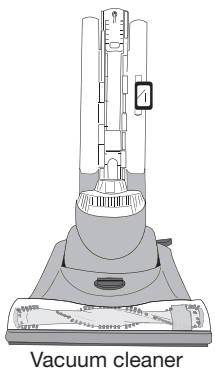
Vacuum cleaner

Dust cup


Handle


Hose with wand

1 screw

Extra belt

Important safeguards

Stair and upholstery brush *(on some models)*

Crevice tool


Dusting brush

STEP 2 Easy assembly

⚠ **READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.**
Moving parts! Assemble the vacuum cleaner before using.

Use Phillips screw driver.

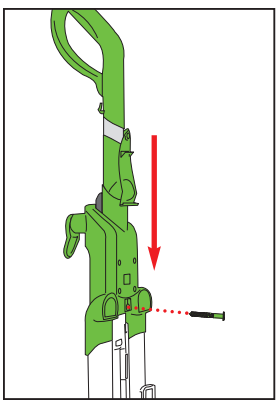
Slide handle onto vacuum back. Fasten with screw.

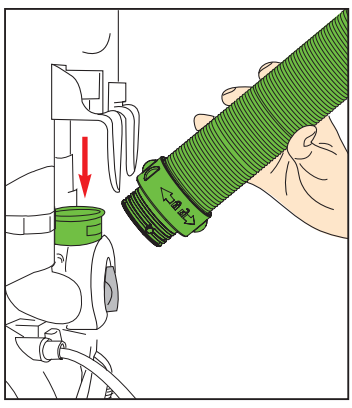
Install hose: Align tabs with notches and set into base.

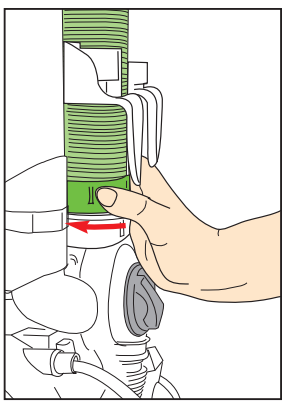
Rotate collar to lock.

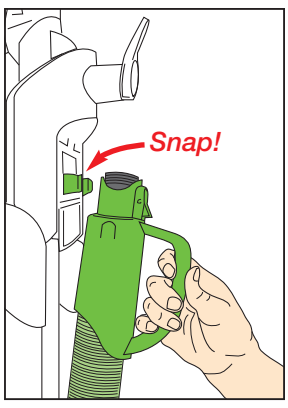

Snap into clip at top.

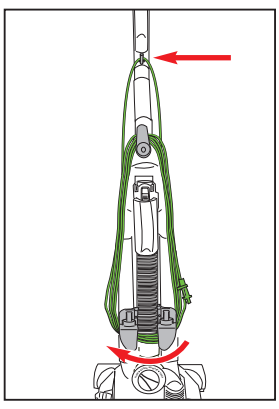
Push cord into cord retainer. Wrap cord.

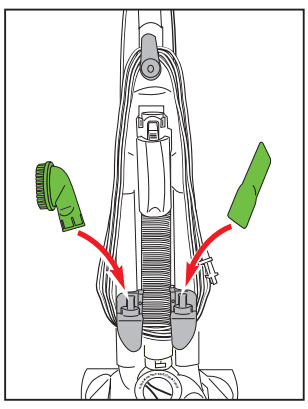
Place dusting brush and crevice tool on back of vacuum cleaner.

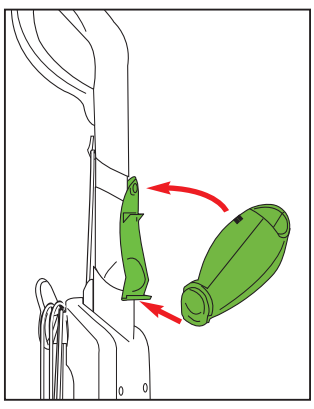
Hook stair and upholstery brush over lip; attach with magnet at top.

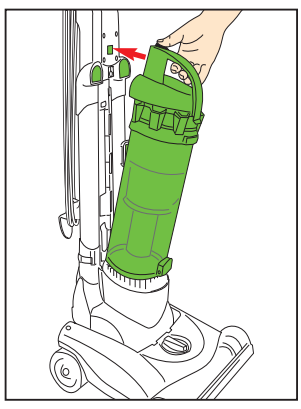
Place dust cup on vacuum and snap into place. Empty dust cup after each use.

STEP 3 Get ready to vacuum

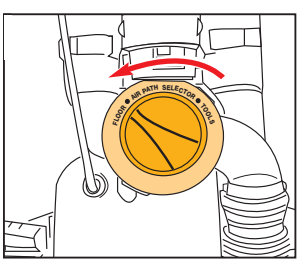
To vacuum floors, turn air path selector to 'FLOOR.'

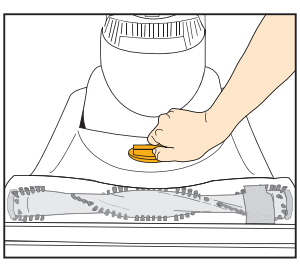
If vacuum is hard to push, adjust carpet height selector to higher position.

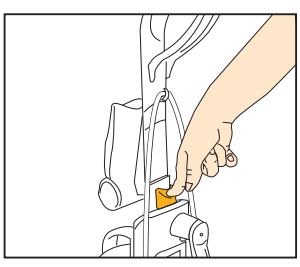
Plug in. Press power switch to turn on.

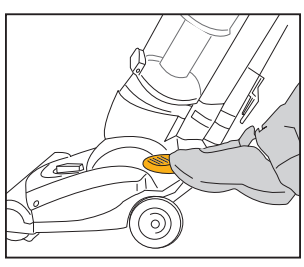
Step on handle release to lower handle into position.

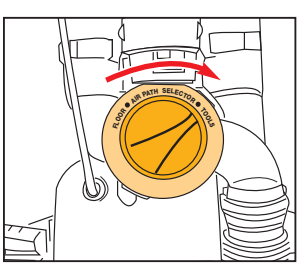
To use accessories, turn air path selector to 'TOOLS.'

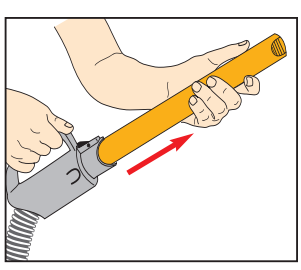
Pull handle to release hose; pull out wand.

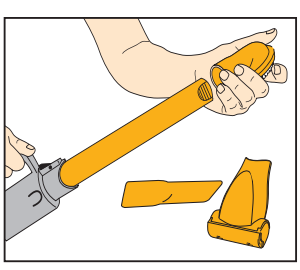
Attach tool to end of wand. Stretch hose as needed.

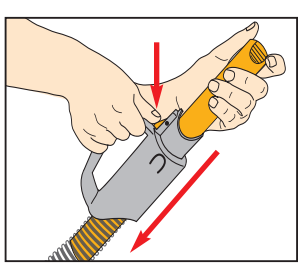
Press button to reinsert wand into hose.

PROBLEM SOLVING
Refer to Owner's Guide.

MAINTENANCE SCHEDULE
Refer to back of dust cup or Owner's Guide.