eureka!®

Invented for the way you clean™

430 Series

QUICK START GUIDE

Thank you for purchasing your new Eureka vacuum!

Before returning, call Eureka Customer Service

HELPLINE

1-800-282-2886

8 a.m. to 7:30 p.m. (CST), Monday - Friday
10 a.m. to 6:30 p.m. (CST), Saturday - Sunday

www.eureka.com

STEP 1 What's in the carton

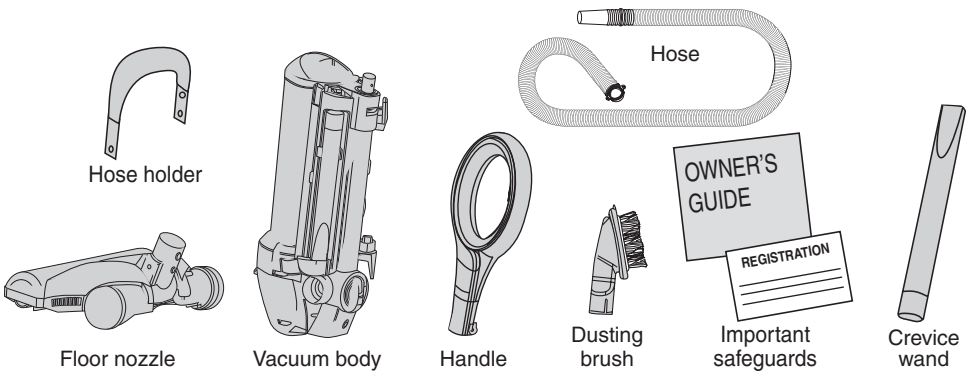

SPECIAL FEATURES
Available on some models

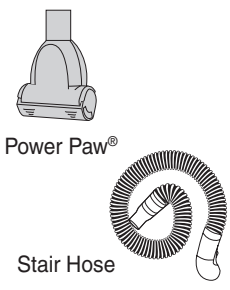

STEP 2 Easy assembly

⚠ **READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.** Moving parts! Make sure power switch is in OFF (O) position before plugging in power cord. Assemble the vacuum cleaner before using.

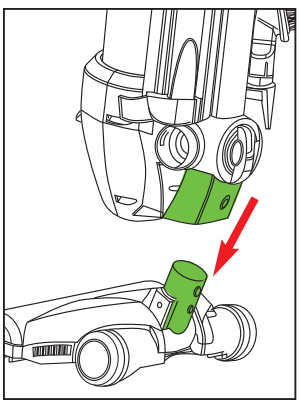

Align vacuum body with neck of floor nozzle. Push until it clicks.

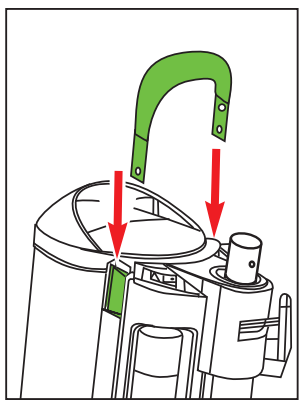

Align hose holder tabs with side grooves. Push down to snap into place.

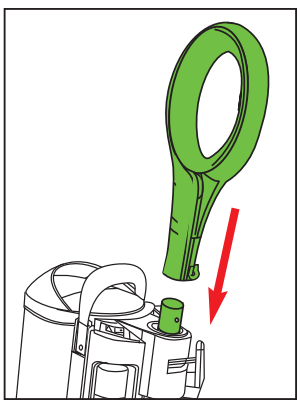

Slide handle onto tube. Push down until handle snaps into place.

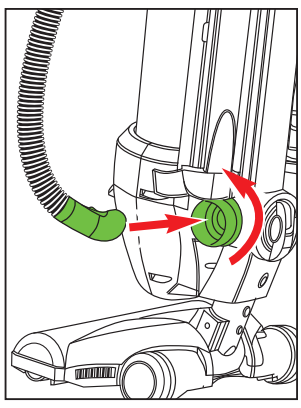

Insert hose tabs into hose connector. Twist counter-clockwise to lock.

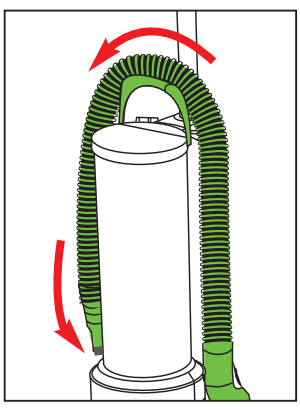

Loop hose over holder and secure other end into hose retainer.

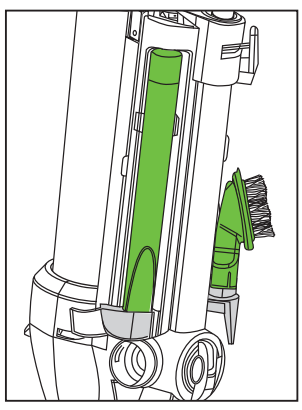

Store dusting brush and crevice wand on back of vacuum.

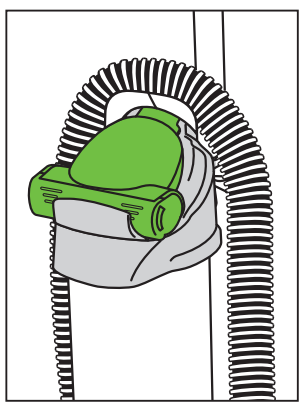

Some models: Snap Power Paw® onto dust cup lid.

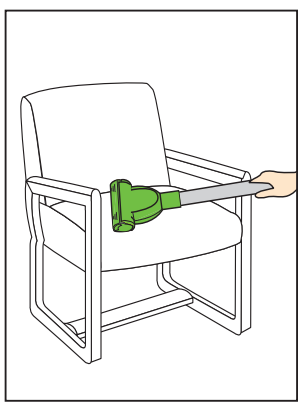

Some models: Use Power Paw® for furniture and stairs.

STEP 3 Get ready to vacuum

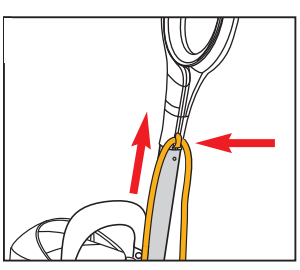

Adjust handle to your height; secure cord in clip at back of handle.

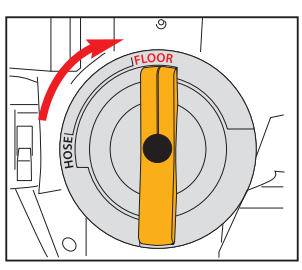

To vacuum floors, turn hose/floor suction control to 'FLOOR.'

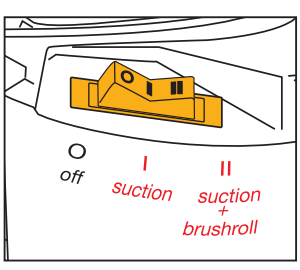

For carpet, press switch to (II). For bare floors, press switch to (I).

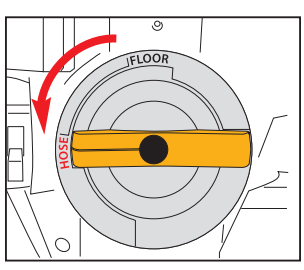

To use accessories, turn hose/floor suction control to 'HOSE.'

Attach tool to end of hose.

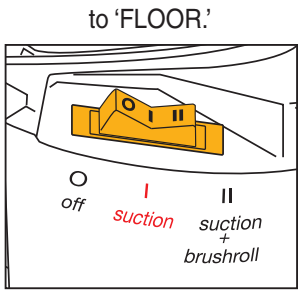

When using accessories, press switch to (I), suction only.

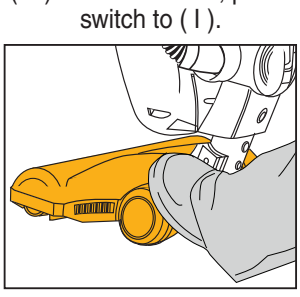

Hold vacuum base firm; lower handle into position.

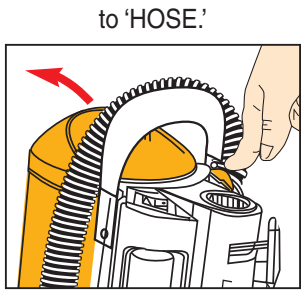

Press 'cup release' button to remove dust cup. Empty after each use.

PROBLEM SOLVING
Refer to Owner's Guide.

MAINTENANCE SCHEDULE
Refer to back of dust cup or Owner's Guide.